

TRIM RINGS

Beside the window, putty tape and screws...you need a trim ring to complete your window installation.

Trim rings are installed on the interior of the wall. They are also called interior clamp rings. They fasten to the window with screws that go through pre-drilled holes located on the ring and into a narrow groove located around the window hole cut out. See below:



Trim ring



Groove in window around hole cut

Trim rings are made based on your wall thickness. For example, if you have a 2" wall, then you need to order a 2" ring. The actual ring itself is not 2". The depth of the ring varies based on the thickness of the window. Different window series have different widths. The rings are ordered based on the series of window. Below are a few examples of how widths may vary with rings and with windows.



Ring



Ring



dual pane window



standard window

Rings can work two ways. The flange can clamp onto the window for walls that are thinner than the window itself. See below (a) or they can work opposite, creating a much bigger space for the wall (b)



This ring and window combination will fit a 1 1/4" wall

This portion is the ring



This portion is the window



This ring and window combination will fit a 1 3/4" wall

This portion is the ring



This portion is the window



Please see RV Window Installation Instructions on the homepage of www.callencamper.com.

These instructions were created based on experience. They are not professional instructions and should be used only as a guide..